ASSEMBLY INSTRUCTIONS

EXTRA HEAVY DUTY STEEL SHELVING

Models
H1275 H1870
H1570 H2470
KMH7012

PARTS LIST

5 - Shelves
8 - Posts
4 - Brackets

FOR MODEL H1275, H1570, H1870 & KMH7012

8 - Braces 22″

FOR MODEL H2470

4 - Braces 22″
4 - Braces 26″ (Side)
69 - Nuts and Bolts

HOW TO ASSEMBLE UNITS

1. Preassemble end frames, using 4 post and 2 brackets. Bolt brackets through side flanges at first hole from end. (See sketch) Where 2 or more units are used, intermediate frames can be preassembled to greatly speed up set-up time. (See sketch).
2. Attach top and bottom shelf with bolts and nuts at two points for each corner.
3. Stand box rack up.
4. Level and position shelves as desired. Attach bolts and nuts at two points for each corner.
5. Bolt 4 back braces and side braces in position diagonally. (See sketch).
6. Check unit for squareness and tighten all bolts and nuts.

END UNIT

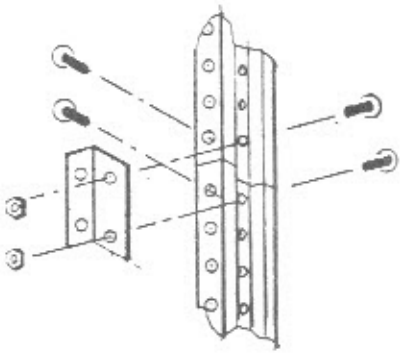

INTERMEDIATE UNIT

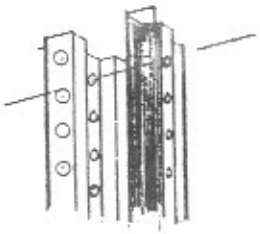

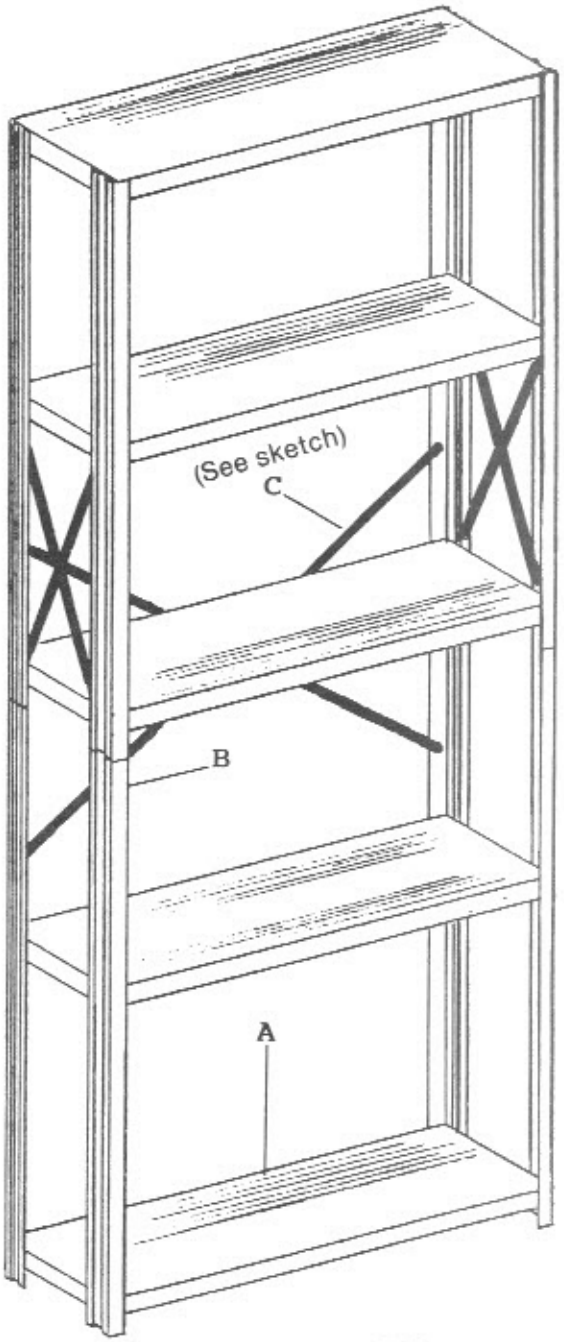

A — Shelf
B — Post
C — Brace

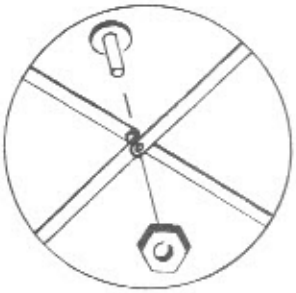

CAUTION: DO NOT use this unit as a ladder. If the unit is to be either loaded in a top heavy manner or positioned on an uneven floor, it should be secured to a suitable supporting structure.

HOM-E-QUIP STORAGE SYSTEMS

HOM-E-QUIP CONSUMER PRODUCTS DIVISION EDSAL MFG. CO.
4400 S. Packers Ave. • Chicago, IL 60609